

Before using the coffee grinder/dispenser slide right hand operation handle of the dispenser in the utter backward position and/or left hand handle in the utter forward position.

Right- or left handed operation of the Coffee dispenser

1. Put the filter holder of your coffee maker with paper filter inside underneath the dispenser opening in front. (or your cafetière).
2. Move right hand operation handle to the utter forward position or left hand operation handle to the utter backward position. This movement is characterized by a clear "click".
This first stroke you have just completed will **not** release coffee, but is necessary to fill the inner mechanism.
3. From the second complete stroke (remember from "click" to "click") the dispenser will release coffee in quantities of one standardized measuring spoon.
4. If a full stroke is not completed, but say will be stopped half way, half the quantity of coffee will be released, but bear in mind that the other half will be released first in the next use, therefore always go from "click" to click" and adapt the amount of water in your coffee maker to the "full spoon" delivery of the dispenser.

The wiper which travels with each dispensing stroke along the inside of the reservoir is meant to keep clear visibility of the contents inside the reservoir.

As a result of air-circulation the last few coffee beans are being blown aloft in the hopper.

We advise to refill hopper before being completely empty.

The stainless-steel sieve of the coffee grinder produces the right grain for the filter grind method for use in our Moccamaster coffeemakers.

Maintenance of the coffee grinder

First unplug coffee grinder.

Regularly clean the outside of the sieve and the grinding chamber with the brush supplied with the grinder.

Should a new cutter blade or sieve be needed, please contact your supplier for instructions.

Never clean coffee grinder with a very wet cloth or put it under water.



info@technivorm.com
84950/19/07/12

MOCCAMASTER



the coffeemaker makers.

MOCCAMASTER

COFFEE GRINDER/DISPENCER KM/DOS



DIRECTIONS FOR USE

Instructions for using the moccamaster grinder KM4

Read before use and store in a safe place: General safety

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.

The appliance is intended to be used in Household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments.
- Farm houses
- By clients in hotels, motels and other residential type environment
- Bed and breakfast type environments

Use the machine indoors only.

2. To protect against fire, electrical shock and injury to persons do not immerse coffee grinder, cord or plugs in water or other liquid.
3. Check to see if the voltage of the machine matches your mains voltage.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
6. Avoid contacting moving parts
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury of persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter where it can be pulled on by children, or touch hot surface
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Always place the lid and receptacle in the right position as shown in the figure on the next page.
16. Unwrap the coffee grinder with care and remove all packaging materials. Keep the packaging (plastic bags and cardboard) out of reach of children.

Technivorm-Moccamaster Coffee grinder/Dispenser KM/Dos.

1. hopper lid
2. hopper
3. push button switch
4. sieve
5. cutter blade
6. grinding chamber
7. dispenser
8. operation handle
9. dispenser opening



Directions for use

Fixation to the wall

Find a place close to a plug-connection and leave sufficient space over grinder (about 20 cm) to enable filling of the hopper.

Slide bearer off dispenser by pushing this downwards.

Plugs and screws have been enclosed for fixation. Before screwing bearer against wall drill 6 mm holes in the wall with a masonry drill and then put plugs in holes. When fixing on a tiled wall holes can be drilled best in the joints. The upward sides of bearer should be pointing towards yourself, like the edged part below fits into the reservoir of the dispenser.

Slide dispenser back into bearer.

Operating the Coffee grinder/Dispenser

The coffee grinder is only meant for grinding coffee beans.

Before filling the hopper of the grinder with coffee beans remove cardboard jigs from the grinder's interior. Check hopper for presence of foreign objects before using. Never add anything else to the beans as this may cause damage to the grinder.

**To prevent overheating of the motor:
Don't grind longer than 1 minute each time.**